



ID	KIC000128	Creation date	February 17, 2004, updated April 1, 2004 and July 5, 2004.
Platform	S60 2nd Edition	Devices	Nokia 6600, version 3.42.1.
Category		Subcategory	

Keywords (APIs, classes, methods, functions):

Overview

Nokia 6600 browser crashes if the C-key is used for emptying characters in XHTML input field.

Description

XHTML input fields are used for inputting, e.g., username and password data. If the user types in incorrect characters and presses the C-key to empty the input field and then starts typing in characters again, the browser gives an error message and crashes.

How to reproduce

Go to an XHTML page which contains an input field. Type in a few characters and press the C-key to empty the input field. Then start typing in characters again. The browser gives an error message and crashes.

Solution

Corrected in software release 4.09.1 and onwards.